


Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500 kpa.
Maximum water temperature is 65 deg.c.

INSTALLATION GUIDE

Monsoon Vertical Shower
300mm/600mm

Product code:
MSHAVSS3/MSHAVSS6

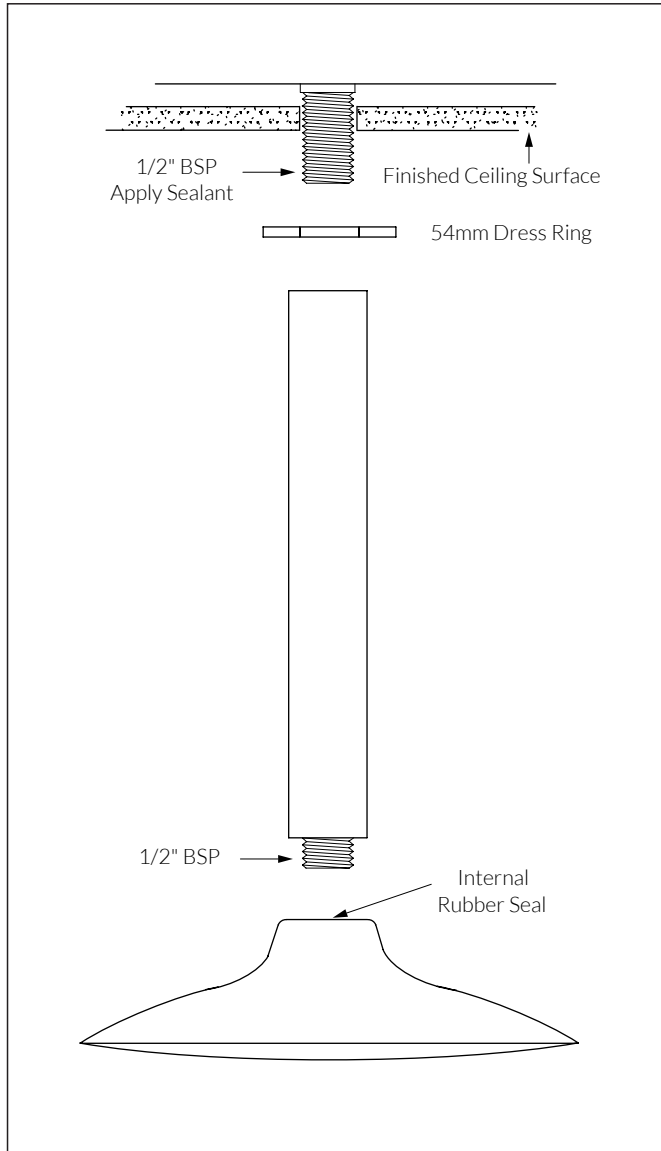

INSTALLATION GUIDELINES

- Flush water lines prior to fitting the shower.
- Attach Ceiling Arm to Shower Head.
- Apply thread tape to Ceiling 1/2 BSP thread .
- Position Dress Ring and fit Shower to Ceiling.
- Operate tapware and check all connections for water leaks