


Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500 kpa.  
Maximum water temperature is 65 deg.c.

INSTALLATION GUIDE

**Suba Robe Hook**  
Product code: BRH

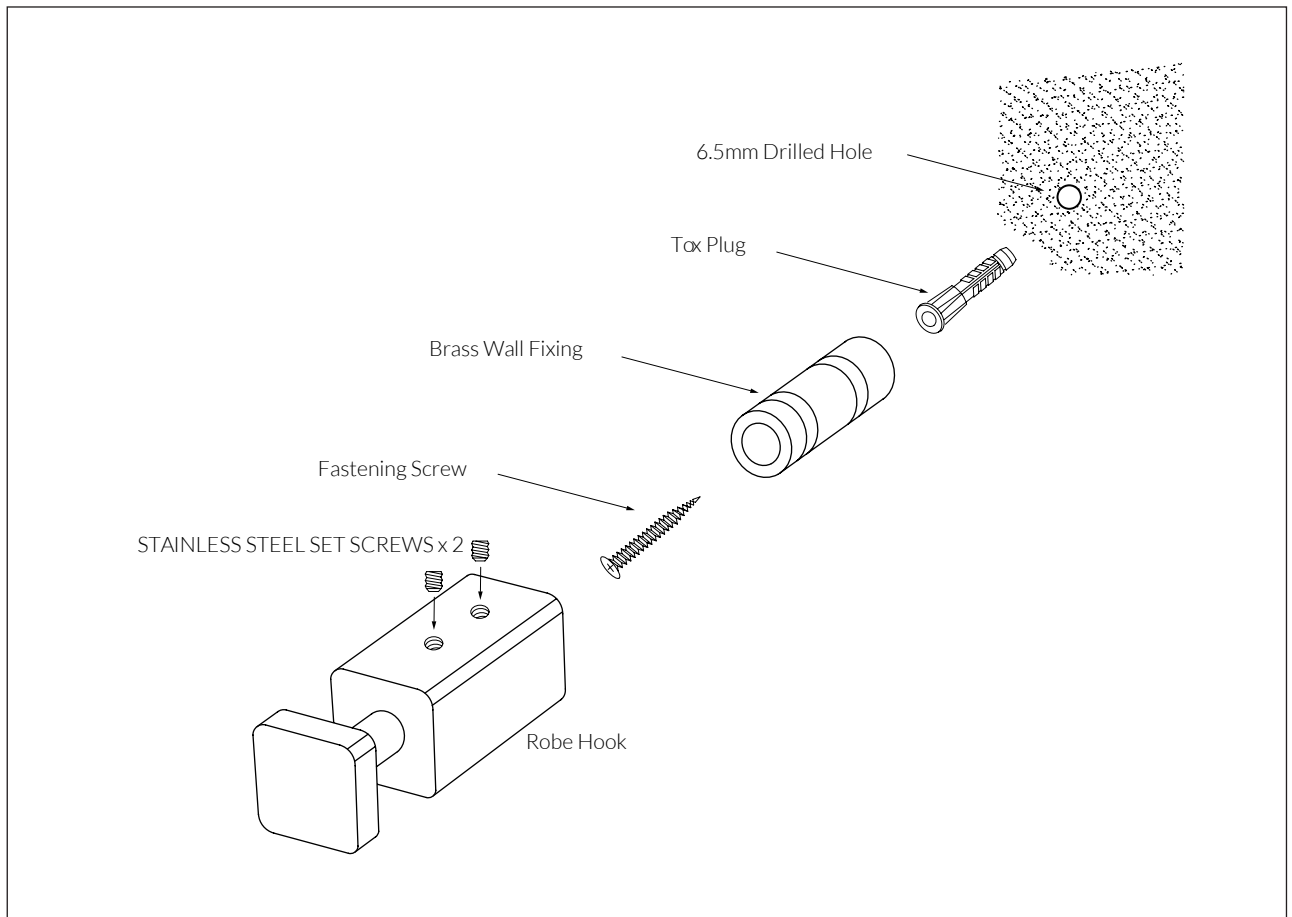

- The Robe Hook is supplied pre-assembled within its packaging.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws and remove the Brass Wall Fixing.
- Drill a 6.5mm hole, fit Tox Plug and secure the Brass Wall Fixing using the Fastening Screw.
- Fit the Robe Hook over the Brass Wall Fixing, aligned square, and tighten the Stainless Steel Set Screw.