
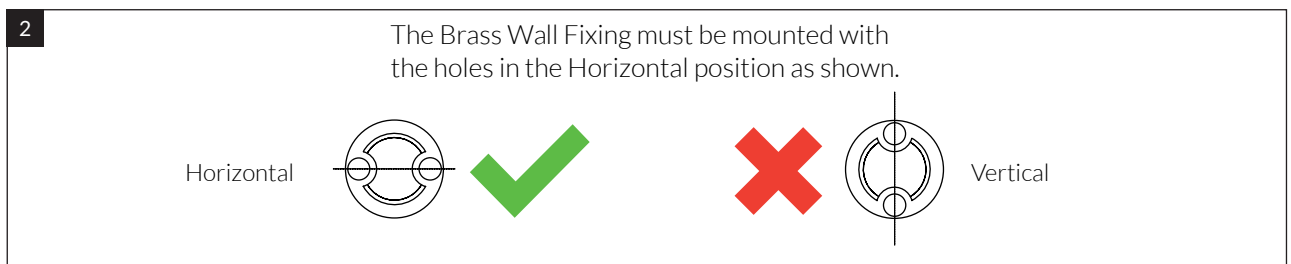


Tapware is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500 kpa.
Maximum water temperature is 65 deg.c.

INSTALLATION GUIDE

Suba Shower Shelf
Product code: BSS

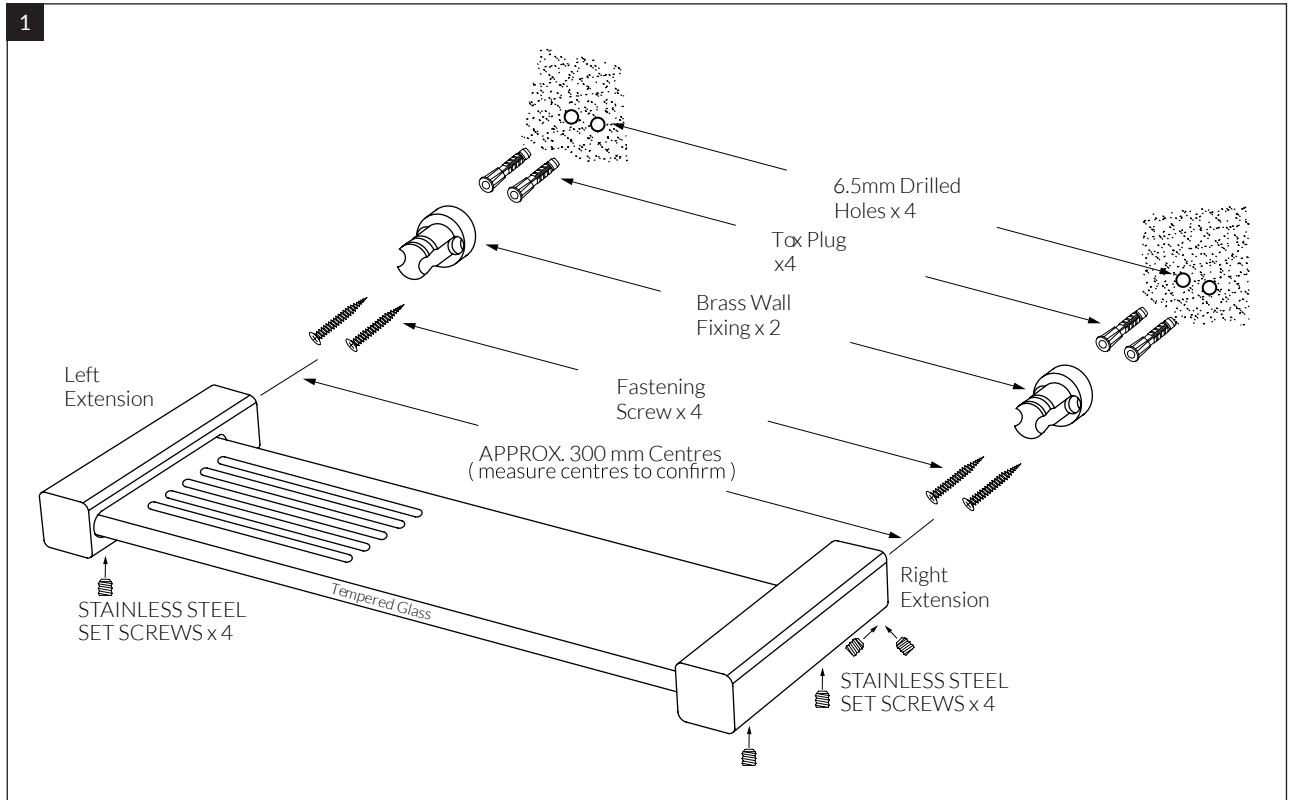

- The Shower Shelf is supplied pre-assembled within its packaging.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws and remove the Brass Wall Fixings.
- Prior to drilling mounting holes, measure to confirm the exact centre distance between the Extensions as assembled.
- Choose the desired location for mounting and mark-out measured centres, Add 1 or 2 mm to ensure final fit of Shower Shelf.
- Centralize the Brass Wall Fixings onto the marked-out positions and transfer drilling holes.

NOTE:

- The Brass Wall Fixings must be mounted with the Holes in the Horizontal direction. (see Fig.2)
- Drill 6.5mm holes, fit Tox Plugs and secure the Brass Wall fixings using the Fastening Screws.
- Fit the Guest Towel Rail over the Brass Wall Fixings as a combined assembly . (Rails with Extensions)
- Ensure the Extensions are aligned square and tighten the Stainless Steel Set Screws.
- To complete the installation tension the Rail retaining screws to fix the Rails.