


Voda Hob sink set

SUSSEX

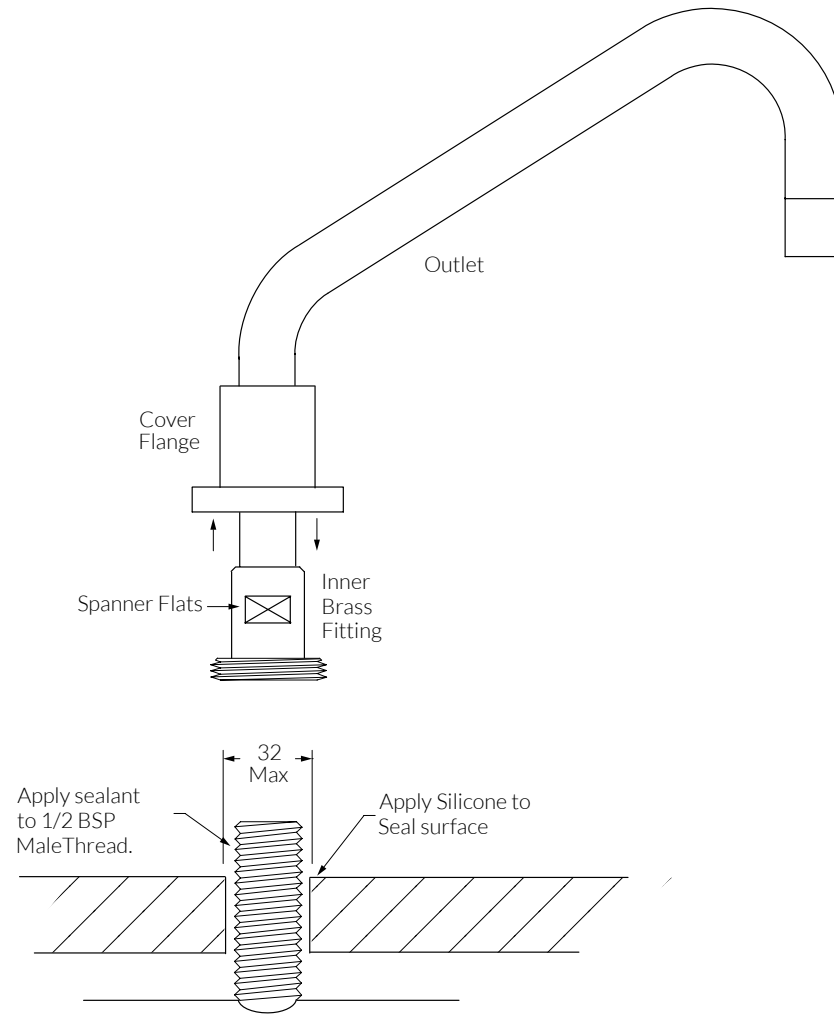

Product code

VHSS Hob sink set

Installation guidelines

- A 1/2" BSP Male Thread is to protrude through the finished Hob surface by 10-20mm.
- Apply adequate thread sealant (Teflon Tape) to the protruding 1/2" BSP thread.
- Ensure the Finished Hob Surface is sealed using an appropriate Silicone.

Fitting

- The Outlet is supplied assembled. No parts need to be removed.
- Unscrew and carefully raise the Cover Flange to expose the Inner Brass Fitting.
- Fit the Outlet to the male 1/2" BSP thread protruding through the Hob.
- The Inner Brass Flange swivels and has provisions for tightening (Spanner flats).
- Lower and thread the Cover Flange to the secured Inner Brass fitting.
- Once installed, check function of the Outlet and check for water leaks.