


Calibre Wall top assembly

SUSSEX

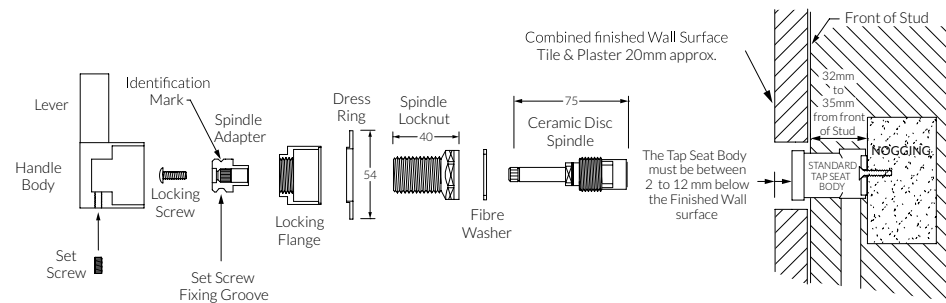

Rough in plumbing

- Upon receiving, carefully unpack the Tapware;

NOTE: some parts have been combined for packaging purposes.

- Separate parts as shown in diagram. The Spindles are supplied with Hot and Cold indications.
- Install the Spindles hand-tight until the seal of the Spindle makes contact with the seat.
- To ensure a good seal is made; tighten the Spindle slightly more using an appropriate spanner. Do not over-tighten.

NOTE: over-tightening the Spindles could damage the ceramic discs and in turn, void the manufacturer's warranty.

- Place the Fibre washer over the seated Spindle and fit the Spindle Locknut. (Tighten well).
- Seal the wall around the Spindle, position the Dress ring and secure using the Locking Flange.
- Attach spindle adapter, ensure the identification mark is at the highest point when the spindle is in the off position.
- Secure the spindle adapter using the locking screw. (Tighten Well).
- Fit the handle body to the spindle, rotate handle until lever is in the vertical position (12 o'clock) and secure with the set screw. (Tighten Well).

NOTE: Set Screw must enter fixing groove.

- After completing the installation, establish water supply, check function of Tapware and ensure no water leaks.

Product code

CWTA Wall top assembly

Rough in (new wall breach)

- A standard Wall Breach (not supplied) is to be used in conjunction with this Tapware.
- Prepare a nogging to be fitted 32 - 35mm back from the front of the stud for the fixing of the Wall Breach (as shown).
- When fixing the Breach to the nogging; ensure the Tap seats of the Breach will be level and square to the Finished Wall.
- To ensure the Tapware will fit correctly the thickness of the finished wall coverings must be calculated prior to "Rough In".
- When using thicker than normal wall covering, position the breach as forward as possible to ensure the Tapware will fit.

Using existing breach (changing tapware only)

- Remove the old Spindles and clean surrounding area.
- When installing new Spindles into old Breaching, it is highly recommended to use a re-seating tool to dress the Seat.
- Ensure the Spindle Seat is clean, flat and free of any debris.
- All lines must be completely flushed prior to fitting the Spindles.
- The distance from the finished Wall surface to the top of the Tap Seat must be between 2 to 12mm (See diagram)
- If the installation configuration is not with-in the dimensions as shown, alternative Spindles are available.

Longer Spindles can be ordered from original place of purchase. Sussex Part No. SXSPEK (12mm longer than standard)

NOTE: Seat or Breach Body extensions are NOT to be used in conjunction with this Tapware.

Failure to adhere will void warranty.