
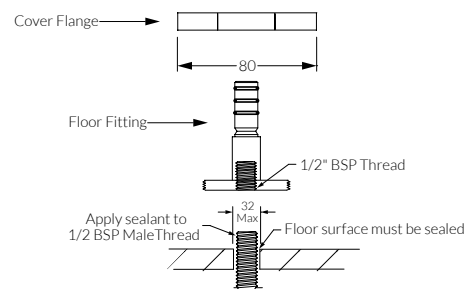


Scala Floormount outlet

SUSSEX

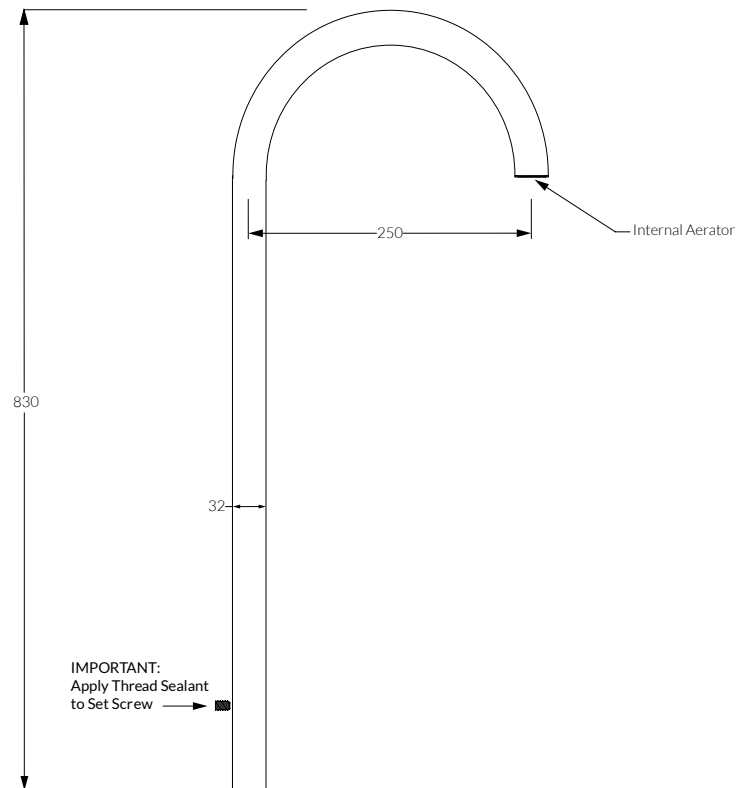

Product code

| | |
|--------|--------------------------------|
| SFLO83 | Floormount outlet |
| SFMBOC | Floormount basin outlet curved |
| SFMBOQ | Floormount basin outlet square |

Installation guidelines

- The Floormount Outlet requires a male 1/2" BSP fitting to protrude through the finished floor surface.
- Prior to fitting the Floormount Outlet, ensure the floor surface is completely sealed and watertight.
- Upon receiving, remove the floor fitting from the Outlet by loosening the Set Screw.
- Fit the Floor Fitting to the 1/2" BSP male thread protruding through the finished floor surface.

Note: Additional anchoring points are provided within the floor fitting.

- Once the floor fitting has been tightened, fit the Cover Flange.
- Ensure the O-Rings are intact and then gently lower the Outlet over the floor fitting.
- The Outlet is pushed over the fitting passing through the Cover Flange until the base of the Outlet rests on the floor fitting.
- Position the Outlet in the desired direction and then secure by tightening the Set Screw.

Note: Apply Thread Sealant to set screw before final fit off.

- Once installed, check function of the Outlet and check for water leaks.

