Oria

Basin Set

SUSSEX

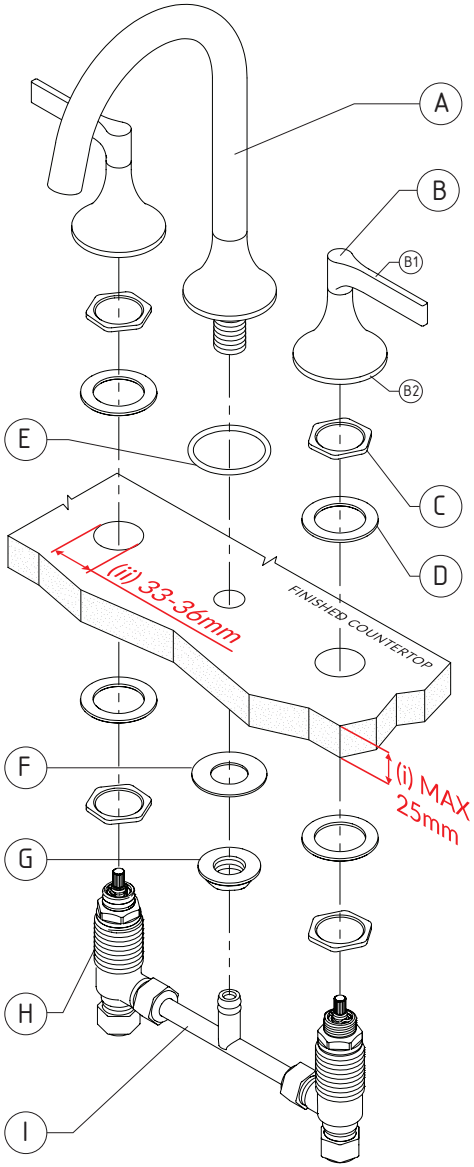

Product codes:

OBS.01

Product parts:

- (A) Outlet Assembly (Preassembled)
- (B) Handle Assembly (Pre assembled consisting of B1 - Handle and B2 - Flange)
- (C) Basin Body Locknut x4
- (D) Basin Body clamping
- (E) Outlet O-Ring
- (F) Oultet clamping washer
- (G) Outlet Locknut
- (H) Basin Body Assembly x2 (Preassembled and consisting of Basin Body, H/C Spindles, Fiber Washers and Spindle Locknuts)
- (I) Tee-Piece

Installation Preparation:

- A standard Plumbing Wall Breech (not supplied) is to be used in conjunction with this Tapware. Ensure Maximum bench thickness is 25mm (i).
- Standard Spindles are supplied pre-installed into basin bodies and do not need to be separated.
- Handle holes should be between 33mm and 36mm (ii) diameter to allow for spindle clearance.
- In order to install the basin bodies under the bench, temporarily unscrew the top set of Basin Body Locknuts (C) and Basin Body Clamping washers (D) and set aside.
- If bench thickness does not sit within the range specified. Please contact manufacturer.

Plumbers note:

Tapware is to be installed by a Licenced Plumber in accordance with AS/NZS 3500:2025
Recommended working water pressure 300-500kpa.
Maximum water temperature is 65 deg.C.

Lead Free
AS 3718
LIC. 20081

While we aim to ensure the specifications shown are correct at time of printing, Sussex Taps reserves the right to make modifications without prior notice. Always use the physical product for accurate measurements. Dimensions are subject to change without notice. All measurements are shown in millimetres. This product complies with lead free requirements.

Copyright © Sussex Taps

reece

www.reece.com.au

SUSSEX

Fit Off:

1) Measure Bench top thickness and the distance between tap centers. Maximum bench thickness is **25mm** and the maximum distance between tap centers is **240mm**.

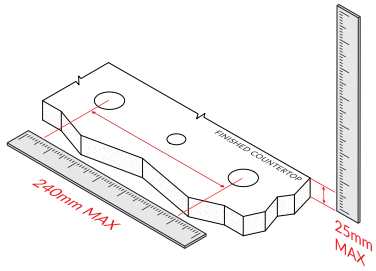

2) Cut if required.

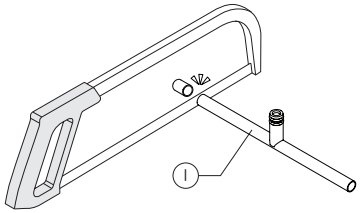

3) Attach Tee-Piece (I) between Basin Body Assemblies (H) using supplied locknuts.

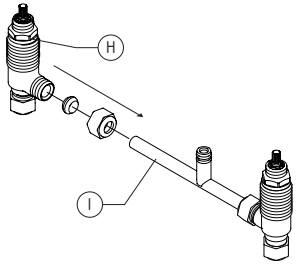

4) Screw 2x Basin Body Locknuts (C) and 2x Basin Body Clamping Washers (D) onto basin bodies and loosely fit the Outlet Locknut (H) and the Oultet clamping washer (F) onto Tee-Piece (I).

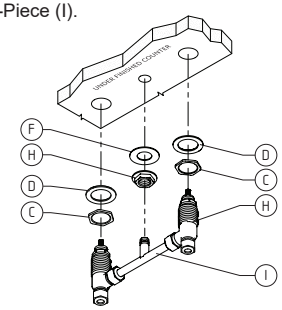

5) On the top of the counter, screw the remaining 2x Basin Body Locknuts (C) and Basin Body Clamping Washers onto basin bodies (H) tighten both sets above and below the counter.

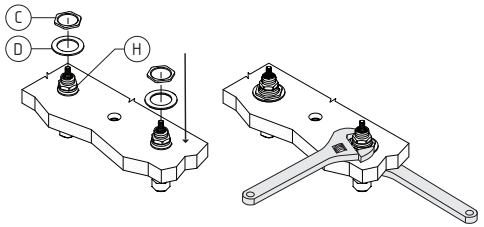

6) The upper locknut which secures the spindle onto the basin should sit with the thread protruding from the bench. The Basin Body Locknuts (C) and Basin Body Clamping Washers (D) sit just below the fibre washer.

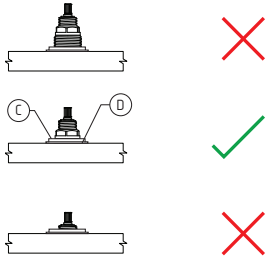

reece

www.reece.com.au