


# Voda

## Rail shower with hand held

SUSSEX

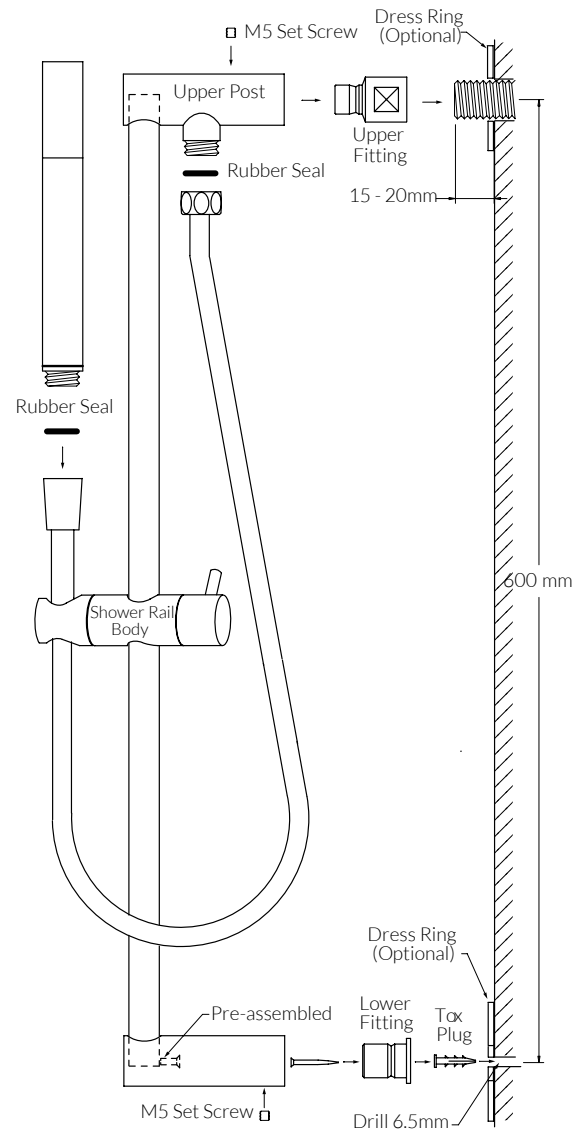

### Product code

VRS Rail shower with hand held

### Installation guidelines

- The Hand Rail Shower will be supplied partially assembled, some parts will require dis-assembling.
- There will be no need to dis-assemble the Shower Rail Holder assembly.
- Remove the Upper and Lower wall fittings from the chrome Posts using the Allen key provided.
- Using appropriate sealant secure the Upper fitting to the 1/2" male thread on the wall, place Dress ring over thread before securing Wall fitting.
- Accurately measure 600mm from the upper fitting and drill a 6.5 mm hole.
- Insert the Tox plug and position Dress ring on wall, secure the Lower fitting with the screw provided.
- Connecting the Rail with the Upper and Lower Posts, push over the Fittings.
- Secure the assembly using the Set screws.
- Attach the Shower hose to the Upper fitting. (Do not over tighten).
- Attach the Hand Shower Head to the other end of the Shower Hose.
- Seal all wall penetrations. Water test all connections.