


Voda Shower shelf

SUSSEX

Product code

VSS300 Shower shelf

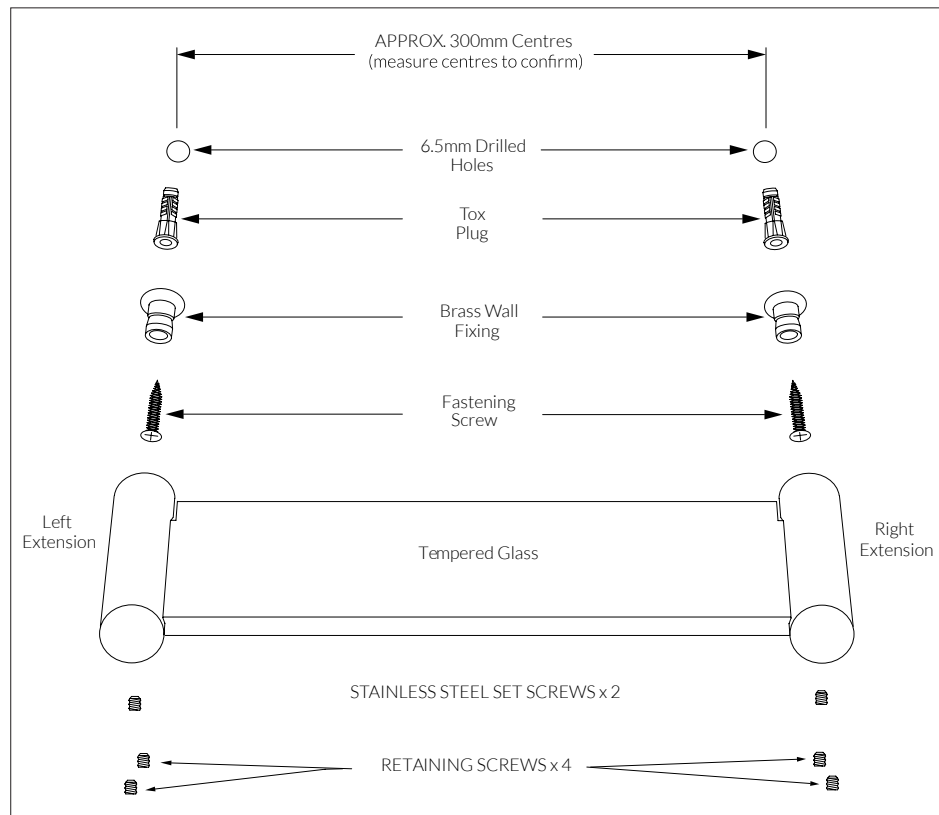

Installation guidelines

- This product is supplied pre-assembled within its packaging.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws and remove the Brass Wall Fixings.
- Accurately measure the distance between the extension centres as supplied.
- Choose the desired location for mounting and mark-out measured centres.
- Follow sequence as drawn to secure the Brass Fixings.
- Prior to mounting, use the supplied 2.5mm Allen Key, slightly loosen the Retaining Screws located on the underside of the Extensions
- Align and fit the product as a combined assembly (Glass with Extensions) over the Brass Wall Fixings.
- To complete installation tighten S/steel Set screws and re-tension the Retaining Screws.