
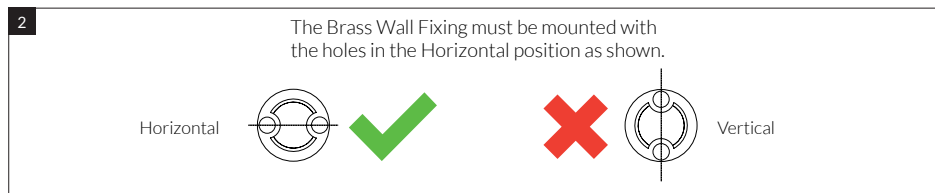


Voda Toilet roll holder

SUSSEX

Product code

VTRH Toilet roll holder

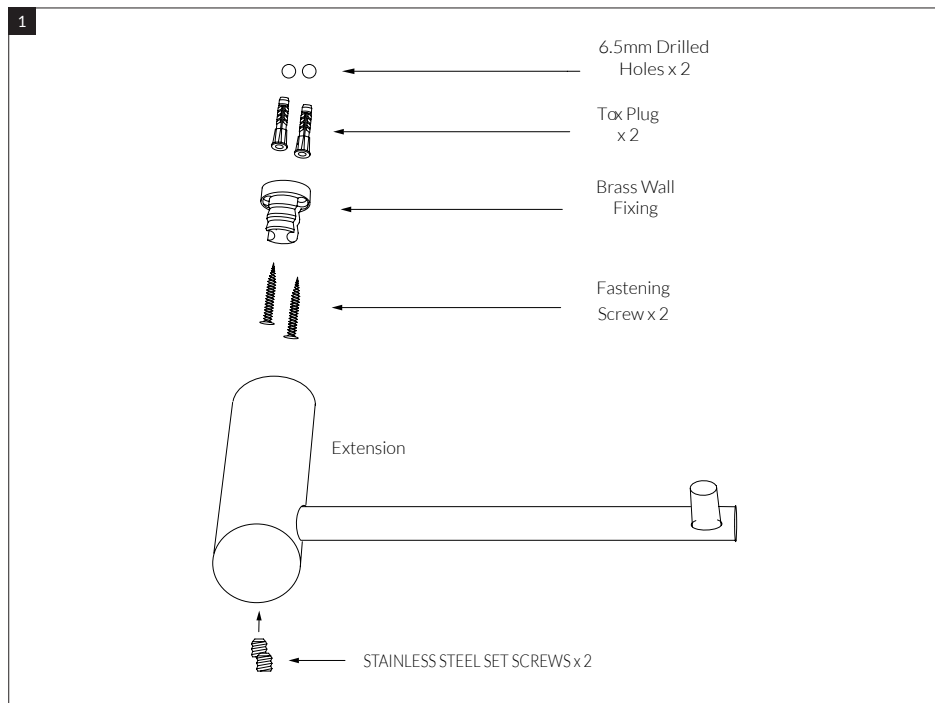

Installation guidelines

- This product is supplied pre-assembled within its packaging.
 - Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws and remove the Brass Wall Fixings.
 - Choose the desired location, use the removed Brass Wall Fixing to mark-out the drilling holes.
- NOTE:** The Brass Wall Fixing must be mounted with the holes in the Horizontal direction. (See Fig.2)
- Drill the 6.5mm holes, fit the Tox Plugs and secure the Brass Wall Fixing using the Fastening Screws.
 - Fit the Double Robe Hook over the Brass Wall Fixing, aligned square, and tighten the Stainless Steel Set Screws