


# Monsoon Vertical shower

SUSSEX

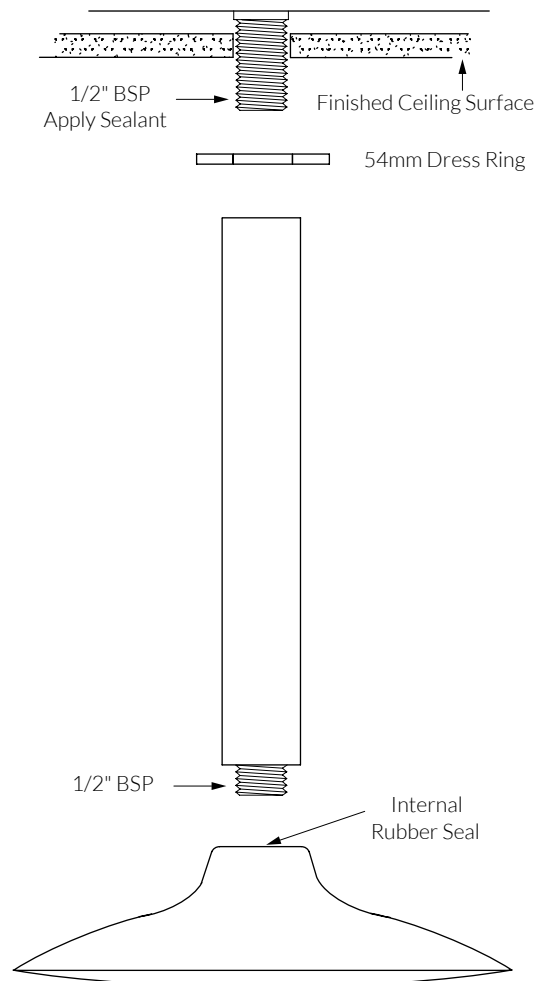

## Product code

MSHAVSS3 Vertical shower 300mm  
MSHAVSS6 Vertical shower 500mm

## Installation guidelines

- Flush water lines prior to fitting the shower.
- Attach Ceiling Arm to Shower Head.
- Apply thread tape to Ceiling 1/2 BSP thread .
- Position Dress Ring and fit Shower to Ceiling.
- Operate tapware and check all connections for water leaks