


# Monsoon Column shower cold

SUSSEX

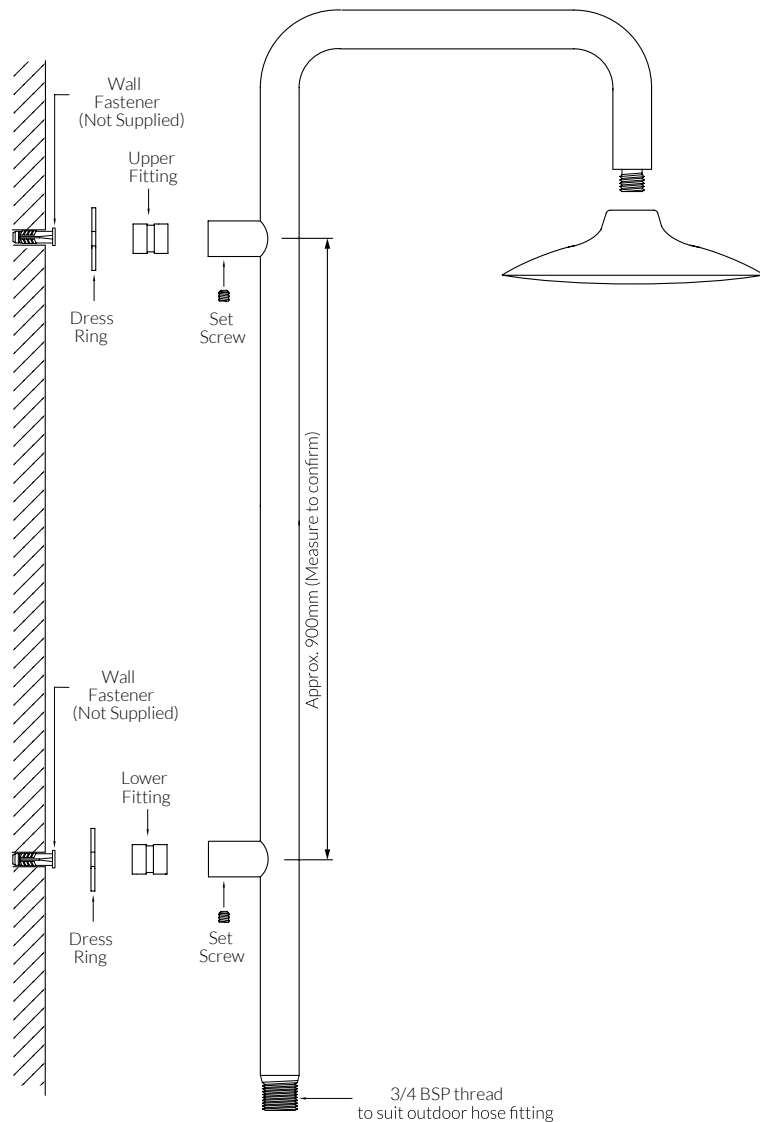

## Product code

MSHM100SS Column shower cold

## Installation guidelines

- Remove the Upper and Lower Fittings from the Column Shower.
- Determine the desired mounting height.
- Drill and insert an appropriate Wall Fastener (Not Supplied) into the finished wall surface.
- Position Dress Ring and fix the Upper Fitting.
- Accurately measure and mark out the position for the Lower Fitting.
- Drill and insert a Wall Fastener (Not Supplied).
- Position Dress Ring and fix the Lower Fitting.
- Fit the Column Shower and secure by tightening the Set Screws.
- Once secured flush water lines and fit the Shower Head.
- Carry out final water test and check for water leaks around connections.