
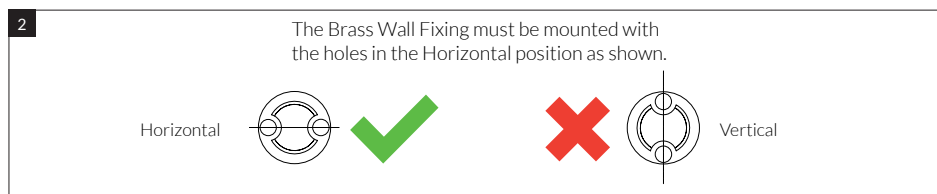


Suba Shower shelf

SUSSEX

Product code

BSS Shower shelf

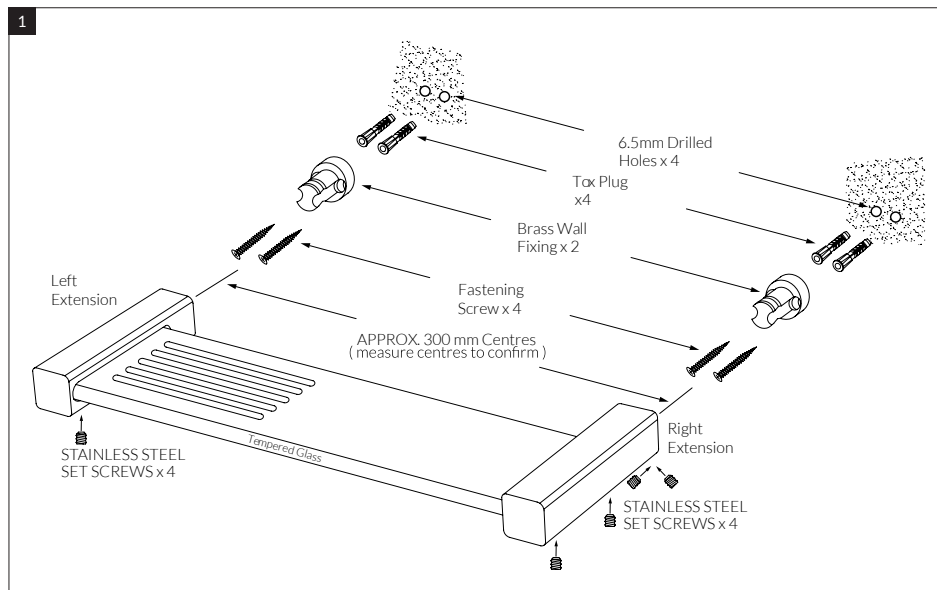

Installation guidelines

- The Shower Shelf is supplied pre-assembled within its packaging.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws and remove the Brass Wall Fixings.
- Prior to drilling mounting holes, measure to confirm the exact centre distance between the Extensions as assembled.
- Choose the desired location for mounting and mark-out measured centres, Add 1 or 2 mm to ensure final fit of Shower Shelf.
- Centralize the Brass Wall Fixings onto the marked-out positions and transfer drilling holes.

Note

- The Brass Wall Fixings must be mounted with the Holes in the Horizontal direction. (see Fig.2)
- Drill 6.5mm holes, fit Tox Plugs and secure the Brass Wall fixings using the Fastening Screws.
- Fit the Guest Towel Rail over the Brass Wall Fixings as a combined assembly. (Rails with Extensions)
- Ensure the Extensions are aligned square and tighten the Stainless Steel Set Screws.
- To complete the installation tension the Rail retaining screws to fix the Rails.