
Suba

Towel rail double



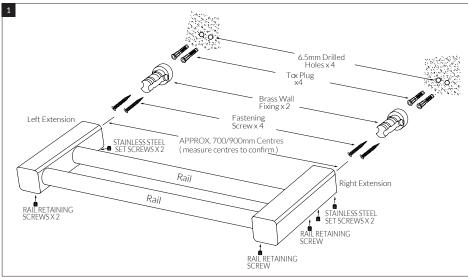



Product code

BTRD700 Towel rail double 700mm
BTRD900 Towel rail double 900mm

Installation guidelines

- Before installing ensure work area is clean and free of any obstacles.
- Carefully unpack to identify the parts and assemble on a non-scratch surface.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws within the Extensions and remove the Brass Wall Fixings.
- Combine the Rails with both Extensions and measure to confirm the exact centre distance between the Extensions
- Choose the desired location for mounting and mark-out measured centres. Add 1 or 2 mm to ensure final fit
 of the Double Towel Rail.
- Centralize the Brass Wall Fixings onto the marked-out positions and transfer drilling holes.

Note

- The Brass Wall Fixings must be mounted with the Holes in the Horizontal direction. (see Fig.2)
- Drill 6.5mm holes, fit Tox Plugs and secure the Brass Wall fixings using the Fastening Screws.
- Fit the Double Towel Rail over the Brass Wall Fixings as a combined assembly. (Rails with Extensions)
- Ensure the Extensions are aligned square and tighten the Stainless Steel Set Screws.
- To complete the installation tension the Rail retaining screws to fix the Rails.