
## Suba

# Towel rail single

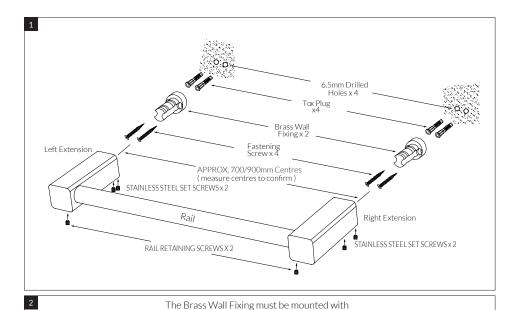



the holes in the Horizontal position as shown.

#### Product code

BTRS700 Towel rail single 700mm
BTRS900 Towel rail single 900mm

### Installation guidelines

- Before installing ensure work area is clean and free of any obstacles.
- Carefully unpack to identify the parts and assemble on a non-scratch surface.
- Using the supplied 2mm Allen Key, loosen the Stainless Steel Set Screws within the Extensions and remove the Brass Wall Fixings.
- Combine the Rail with both Extensions and measure to confirm the exact centre distance between the Extensions.
- Choose the desired location for mounting and mark-out measured centres. Add 1 or 2 mm to ensure final fit
  of the Single Towel Rail.
- Centralize the Brass Wall Fixings onto the marked-out positions and transfer drilling holes.

#### Note

- The Brass Wall Fixings must be mounted with the Holes in the Horizontal direction. (see Fig.2)
- Drill 6.5mm holes, fit Tox Plugs and secure the Brass Wall fixings using the Fastening Screws.
- Fit the Single Towel Rail over the Brass Wall Fixings as a combined assembly. (Rail with Extensions)
- Ensure the Extensions are aligned square and tighten the Stainless Steel Set Screws.
- To complete the installation tension the Rail retaining screws to fix the Rail.