


Circa Vertical shower

SUSSEX

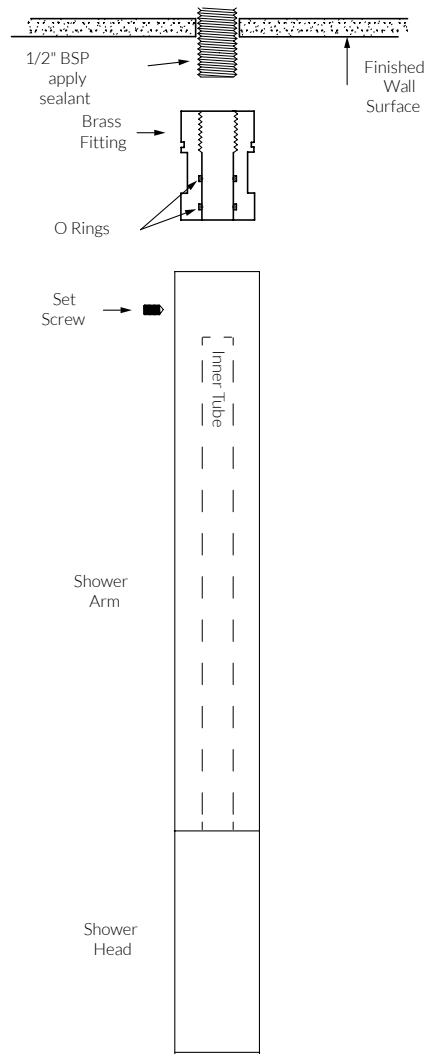

Product code

RVS120	Vertical shower 120mm
RVS450	Vertical shower 450mm

Fit off

- Flush water lines prior to fitting the shower.
- Apply thread tape or sealant to 1/2" BSP thread protruding from the ceiling
- Loosen rear Set Screw and remove the Wall Fitting from the Shower Arm.
- It is not necessary to remove the front Set Screw.
- Attach the Wall Fitting, ensure the O rings remain intact.
- Ensure the Inner Tube is secure inside the Shower Arm.
- Fit the Shower Arm to the Brass Fitting and secure using the Set Screw.
- Operate Shower and check all connections for water leaks.

