Pure

Twin Rail Shower

SUSSEX

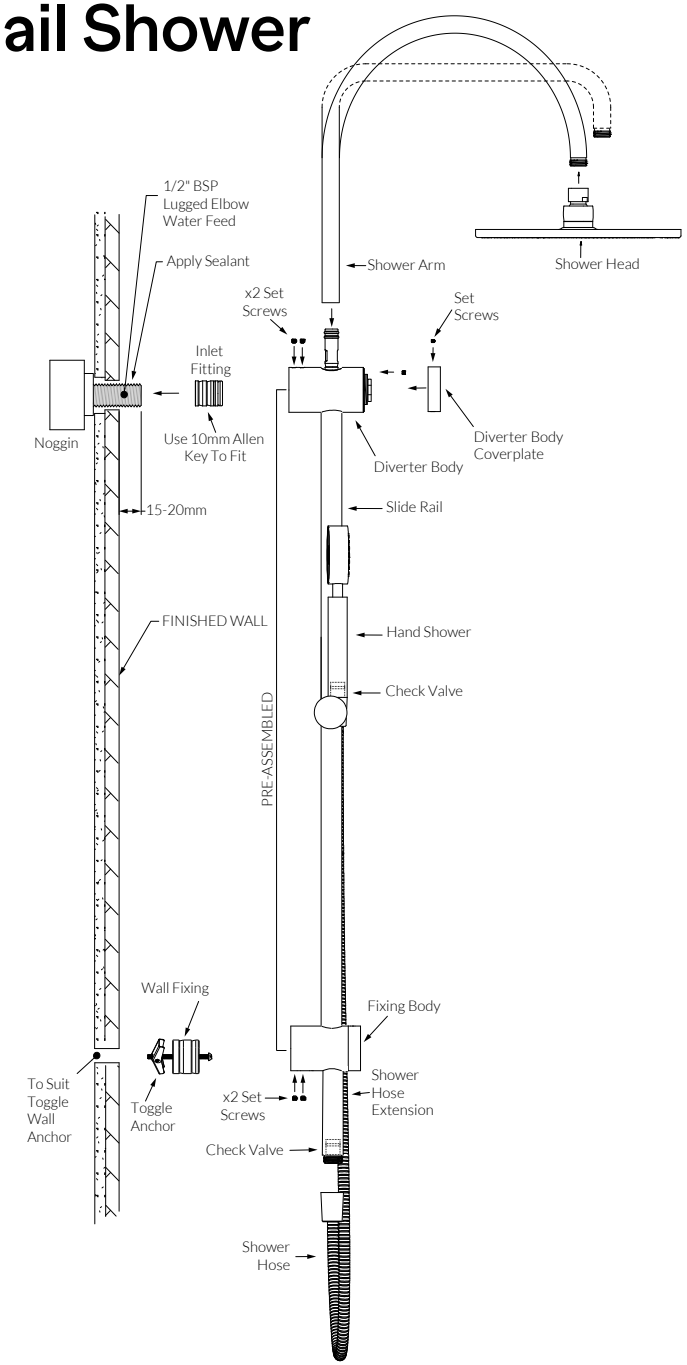

Product codes:

MPSRS
MPSRSC

Install Preparation:

- Ensure all parts are accounted for.
- A flow controller has been incorporated within the shower head, care is to be taken during installation not to damage the flow controller when fitting the shower.
- This shower is suitable for High Pressure applications. This shower may not be suitable for use with Gravity-fed water heaters, low and unequal pressure supply networks.

Fit Off:

- The Rail is supplied part preassembled to suit a Top Water Inlet installation. FOR BOTTOM WATER INLET INSTALLATION SEE PAGE 2 &3.
- Remove Inlet Fitting and Wall Fixing by loosening the Set Screws.
- Accurately mark out and drill for the Wall Fixing 900mm from centre of Water Feed (see Spring Toggle Wall Anchor guide).
- Ensure the wall penetration is sealed prior to connecting any fittings.
- Apply thread tape or appropriate sealant to Water Feed Thread and attach Inlet Fitting using 10mm Allen key.- Using the provided Spring Toggle Anchor attach the Wall Fixing.
- Fit the Rail Shower as assembled onto the Wall Fixing and Inlet Fixing, secure by tightening the Set Screws.
- Remove the Diverter Body Cover Plate by loosening top Set Screw.
- Align and fit the Shower Arm.
- Secure Shower Arm by tightening Set Screws.
- Attach Shower Head.
- Test function and water flow on both Shower Head and Hand Shower.
- Check for water leaks.

Plumbers note:

- Shower is to be installed by a Licensed Plumber in accordance with AS/NZS 3500:2021
- Recommended working water pressure 300 - 500 Kpa. Maximum water temperature is 65°C
- After installation, ensure that shower functions correctly without leaks.
- Please ensure a copy of the Installation Instructions are left with the end user for future reference.

AS/NZS 3718:2005
LIC. 20081

While we aim to ensure the specifications shown are correct at time of printing, Sussex Taps reserves the right to make modifications without prior notice. Always use the physical product for accurate measurements. Dimensions are subject to change without notice. All measurements are shown in millimetres. This product complies with lead free requirements.

Copyright © Sussex Taps

reece

www.reece.com.au

Bottom Water Inlet Installation:

SUSSEX

1. - Remove Diverter and Fixing Body coverplates by loosening Set Screws.
- Loosen Set Screws and detach Diverter Body and Fixing Body from slide rail.

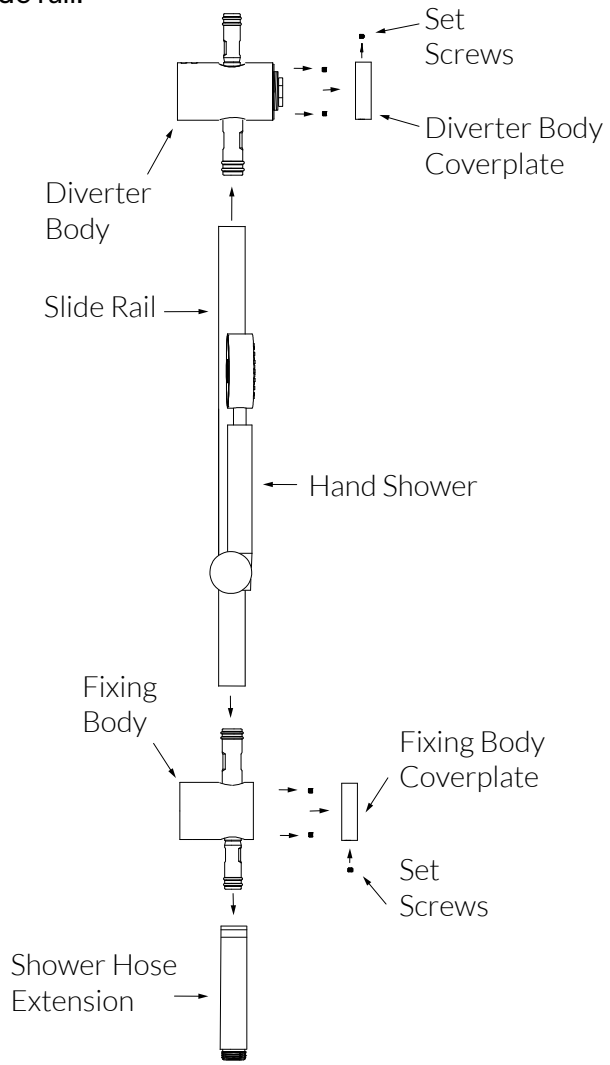

2. - Swap the Diverter Body and Fixing Body positions.
- Diverter body will now be located at the bottom.
- Fixing body will now be located at the top.

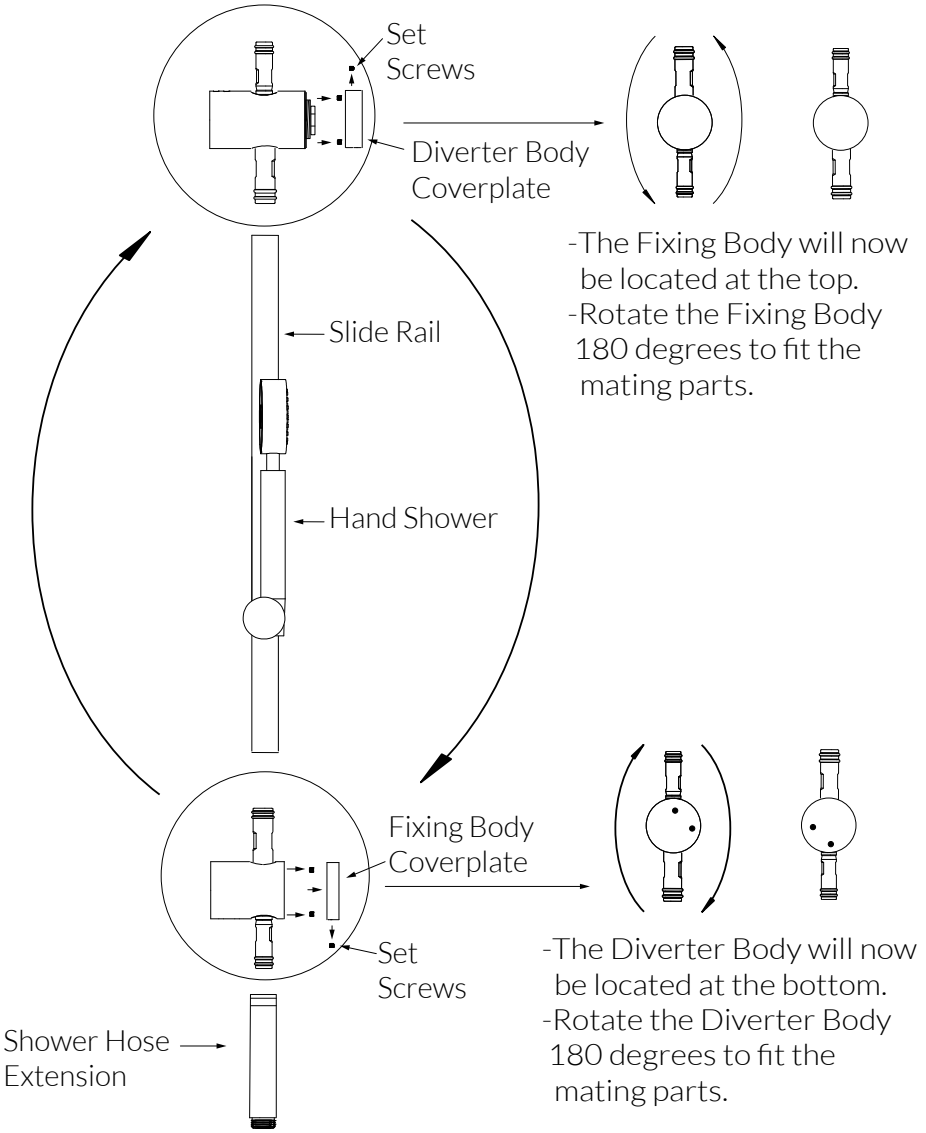

reece

www.reece.com.au

SUSSEX

3. - Re-attach the Fixing Body and the Diverter Body to Slide rail. Tighten Set Screws.
- Re-attach Shower Hose Extension. Tighten Set Screws.
- Attach Shower Arm and Head. Align Shower Arm and Tighten Set Screws. Re-attach Coverplates.

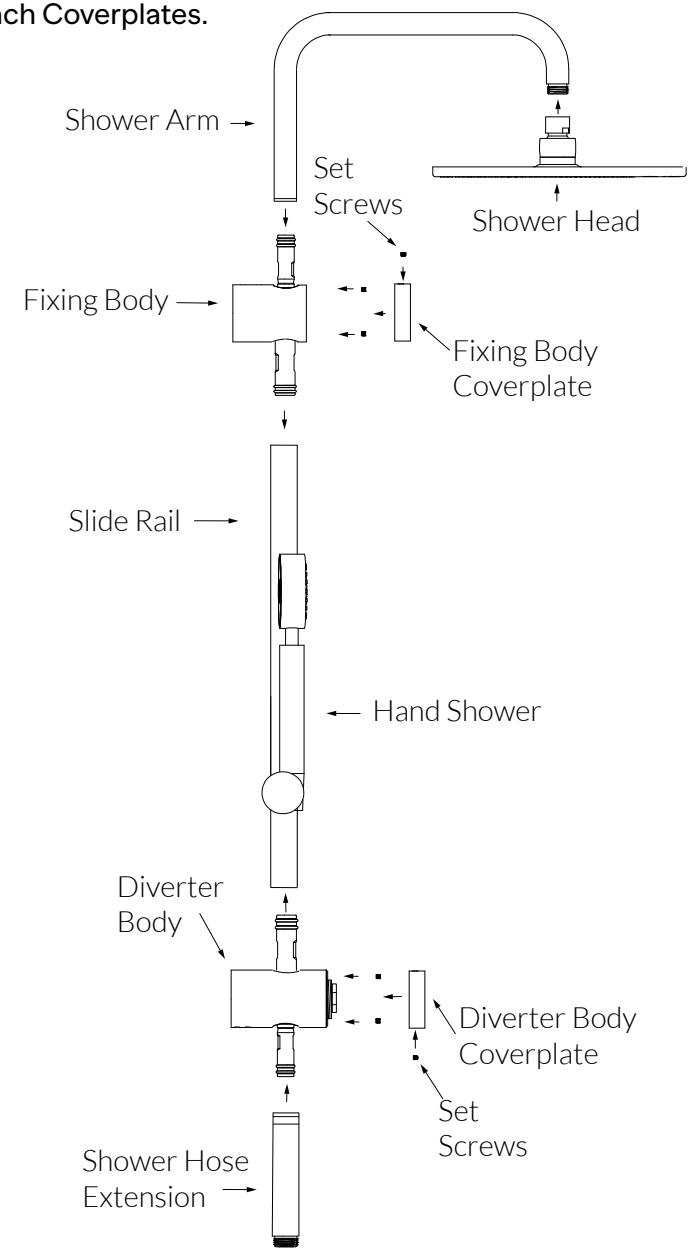

4. - Proceed with installation fit off (see page 1)

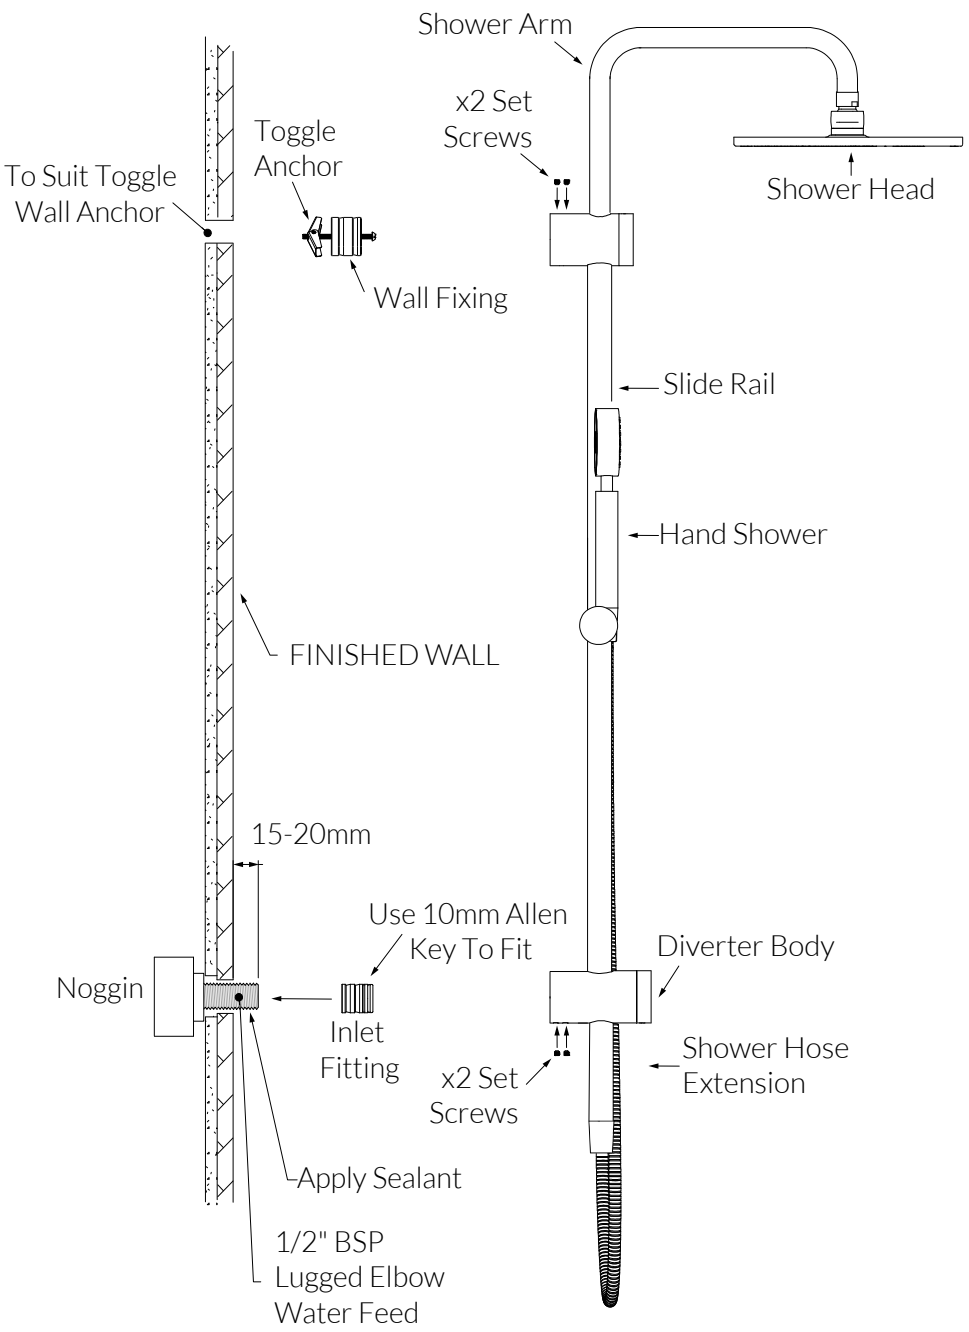

reece

www.reece.com.au

SUSSEX

Spring toggle wall Anchor Guide:

1. Drill a 14mm diameter hole through the Finished Wall to which the Spring Toggle is being fastened to.
2. Pass the Toggle Screw (N) through the Wall Fixing (O) combined with the Dress Ring (P) into Toggle Wings (Q) for a few turns. Compress the toggle wings and insert the anchor into the hole. The wings will spread behind the cavity wall.
3. Pull back on the Toggle Screw (N) to hold the Toggle Wings in place against the recervse side of cavity wall and tighten screw with a screwdriver.

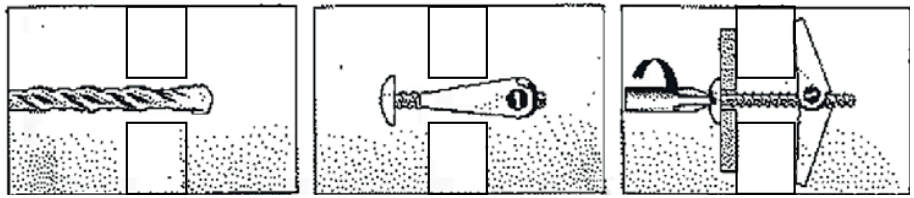

Slider Height and Handle Adjustment

To adjust height of the shower slider, loosen the Handle by turning it anti-clockwise, move the shower slider to the desired height, then tighten the handle.

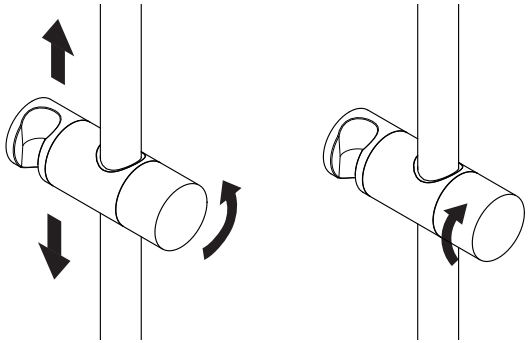

reece

www.reece.com.au